


# MC6RK


## Repair Instructions for MC6 single outlet compressor




**1.** Unplug unit and remove the 4 screws from the bottom housing of the compressor.

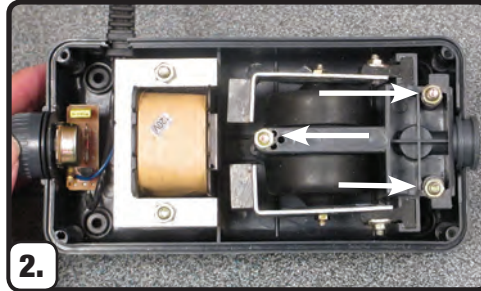


**2.** Remove the three nuts that hold the diaphragm to the base.

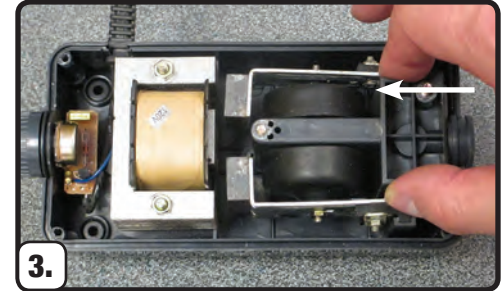

**3.** Remove the diaphragm from compressor. Carefully lift straight up to avoid damaging threaded posts.

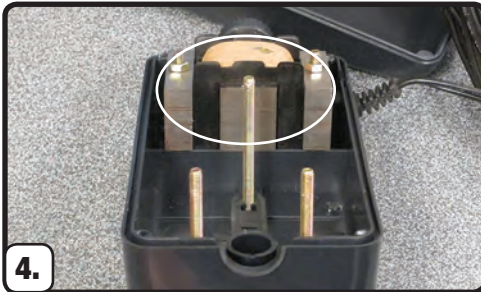

**4.** Inspect magnets and clean if needed.

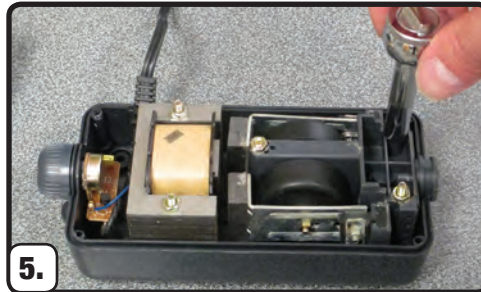

**5.** Install replacement diaphragm and re-install nuts.



**6.** Re-install screws into compressor housing.

