PRO AIR 60 DIAPHRAGM REPLACEMENT

Pro Air 60 Diaphragm Replacement
Item #61007

Contents	
No.	**Description**
1.	Diaphragm x 2
2.	Diaphragm Housing x 2

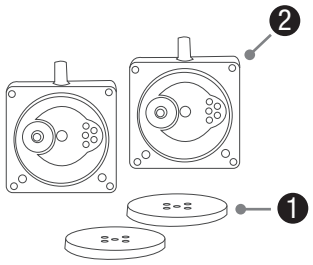

Instructions

- Remove the four screws from the top of the compressor housing, then remove the top section of the compressor by pulling firmly (Ex. 1).

Ex. 1

- To expose the internal rubber diaphragm, loosen the four screws on the silver diaphragm cover plate, then pull gently (Ex. 2).

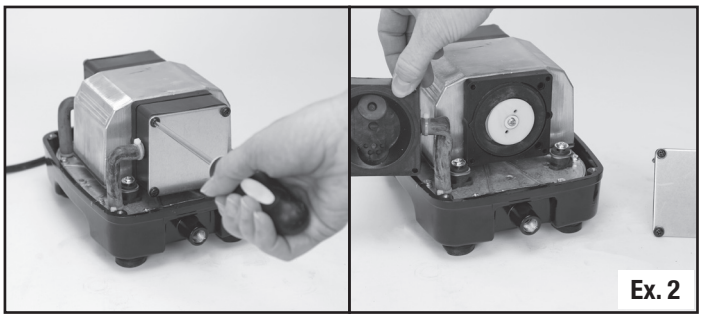
Ex. 2

- Remove the screw at the center of the diaphragm (Ex. 3).
- Gently remove the white disc and the thin plastic washer (Ex. 4).

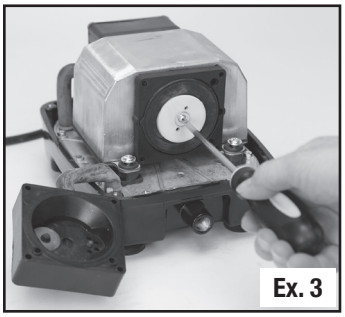
Ex. 3

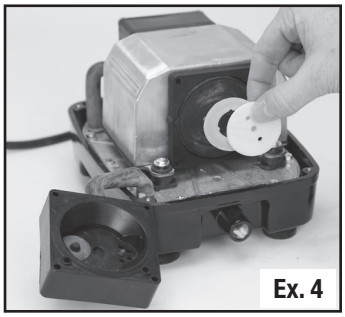
Ex. 4

NOTE: Do not lose these components. Set aside for re-installation.

- Use the tab on the side of the rubber diaphragm to remove it from the unit. Then, install the new diaphragm (Ex. 5).
- Repeat for the other side if needed.
- Re-install all removed components by reversing the process.

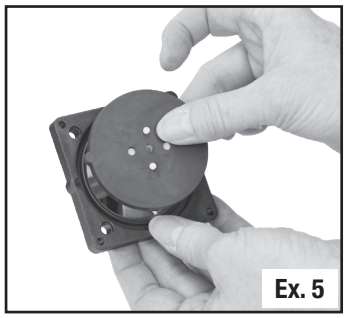
Ex. 5

NOTE: Over time the diaphragm housing may wear; two replacements are included. If needed, replace the diaphragm housing.

REMPLACEMENT DU DIAPHRAGME PRO AIR 60

Remplacement de la membrane Pro Air 60
Référence #61007

Contenu	
N°	**Description**
1.	Diaphragme x 2
2.	Boîtier de diaphragme

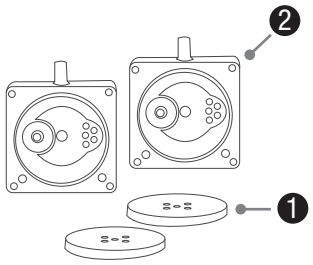

Instructions

- Retirez les quatre vis du haut du carter du compresseur, puis retirez la partie supérieure du compresseur en tirant fermement (Ex. 1).

Ex. 1

- Pour exposer le diaphragme interne en caoutchouc, desserrez les quatre vis sur le couvercle du diaphragme argenté, puis tirez doucement (Ex. 2).

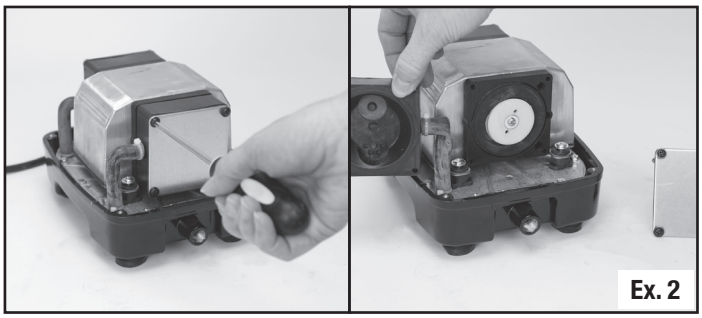
Ex. 2

- Retirez la vis au centre du diaphragme (Ex. 3).
- Retirez délicatement le disque blanc et la fine rondelle en plastique (Ex. 4).

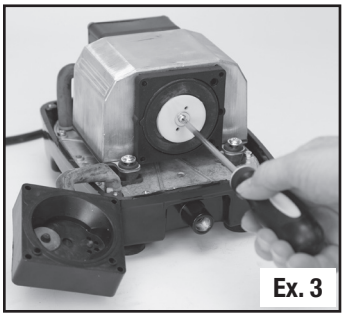
Ex. 3

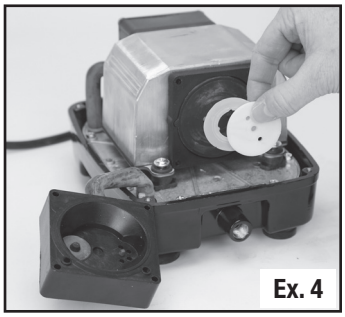
Ex. 4

REMARQUE : Ne perdez pas ces composants. Mettre de côté pour réinstallation.

- Utilisez la languette sur le côté du diaphragme en caoutchouc pour le retirer de l'unité. Ensuite, installez le nouveau diaphragme (Ex. 5).
- Répétez pour l'autre côté si nécessaire.
- Réinstallez tous les composants supprimés en inversant le processus.

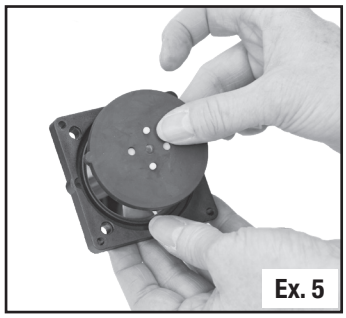
Ex. 5

REMARQUE : Avec le temps, le boîtier du diaphragme peut s'user; deux remplacements sont inclus. Si nécessaire, remplacez le boîtier de membrane.